

When to Select Default Transmitter

The “Default Transmitter” box must be selected (figure 1) when building a vote group, unless there is no console port or if transmitter steering is used exclusively. If this box is not checked, console audio will not be routed out the transmitter port.

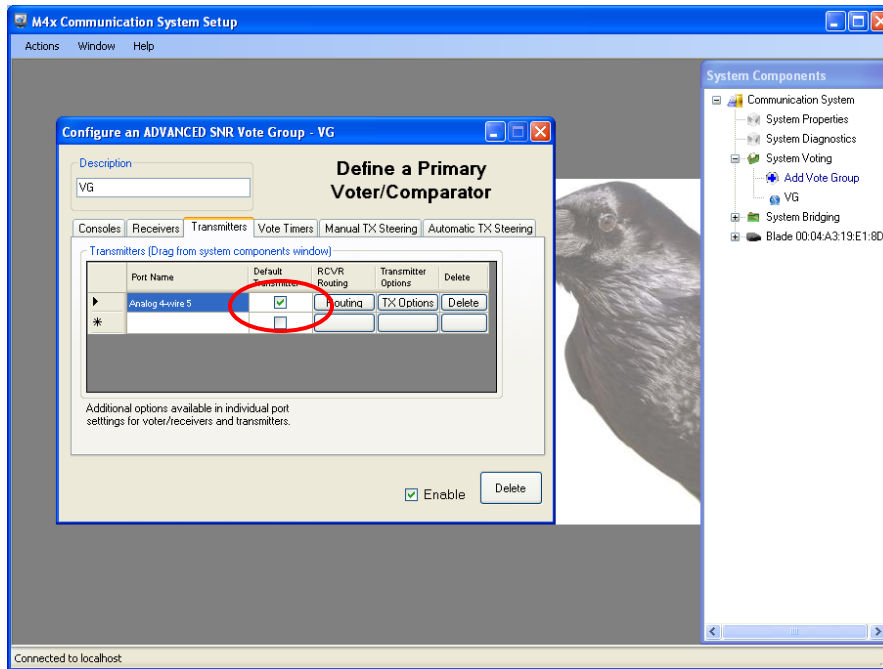


Figure 1